

# ***Brandt***

EN GUIDE TO INSTALLATION AND USE

## Washing Machine



# CONTENTS

Safety instructions ..... 2

Installation ..... 5

Operation ..... 12

Maintenance operations ..... 23

Troubleshooting ..... 27

Availability of spare parts..... 29

## Safety instructions

This appliance is designed to be used for domestic and similar applications such as:

- kitchen areas for staff in shops, offices and other professional premises,
- farms,
- use by hotel, motel and other residential clients,
- B&B type environments.

The appliance must be connected to the mains water supply using the brand new connection fittings supplied with the appliance. Never reuse old fittings.

Never obstruct the ventilation openings.

This appliance may be used by children aged 8 years or over and by individuals with reduced physical, sensual or mental capacity or lack of experience or knowledge of the device provided that they are correctly supervised or have been provided with instructions regarding the safe use of the appliance and provided that the risks present have been fully understood. Children must not be allowed to play with the appliance. Cleaning and maintenance operations must not be carried out by children without supervision.

Children under the age of three should be kept away from the appliance unless they are under constant supervision.

If the power cord is damaged, it should be replaced by the manufacturer, its after-sales service department or a similarly qualified person, so as to avoid danger.

Regarding the instructions for installing the appliance and making its electrical connections, please refer to the appropriate section in this guide.

**WARNING:** Do not connect the appliance to hot water.

The maximum weight of dry laundry is 8 kilograms.

Maximum water supply pressure: 1 MPa

Minimum water supply pressure: 0.1MPa

## **⚠ Warning!**

### **Product installation**

This washing machine is intended for indoor use only.

It is not designed for built-in installation.

Never obstruct the openings.

This washing machine must not be installed in bathrooms, very damp rooms or in rooms where there are explosive gasses or caustic substances. If the washing machine has only one water inlet valve, connect it to a cold water source only.

The power plug must remain accessible after the appliance is installed.

Remove all packaging materials and the transit bolts before using the appliance. Failure to do so may seriously damage your washing machine.

### **Appliance damage hazard!**

Your appliance is for household (domestic) use only and is designed solely for machine washable textiles.

Do not climb on the top of the washing machine. Care when handling the washing machine:

### **Care when handling the washing machine:**

1. The transit bolts must be refitted to the washing machine by a qualified person.
2. Drain any water from the appliance before moving the washing machine.
3. Handle the appliance with care. Never lift the appliance by grabbing projecting parts. The door must not be used as a handle when moving the appliance.
4. This appliance is heavy. Carry it with care.  
Do not close the door using excessive force. If the door is hard to close, make sure that the drum is not overloaded and that the laundry is properly

distributed.

### **Operation of the appliance**

Before using the appliance for the first time, perform a complete wash cycle empty.

Use of inflammable and explosive solvents is prohibited.

Never use fuel and alcohol, etc. as detergents. Only choose detergents that are suitable for machine washing.

Empty the pockets of your clothes. Cutting and rigid objects like coins, pins, nails, screws, stones, etc. may seriously damage this appliance.


Be careful to avoid injury when draining very hot washing water.

Never add water by hand during washing.

Once the washing cycle has finished, wait two minutes before opening the door.

# Installation

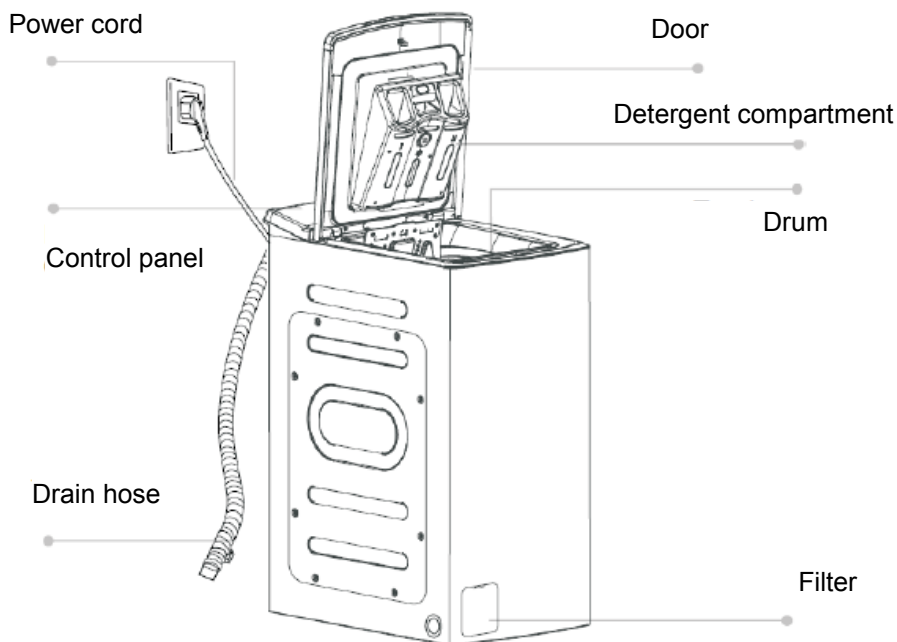



## Description of the product



### Note!

- The illustration of the accessories is provided for reference purposes only. Please refer to the actual product.

## Accessories

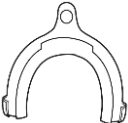			
Transit bolt hole covers	Cold water supply hose	Drain hose holder	User guide

## Installation location




### Warning!

- It is important that the product is stabilised to prevent it from moving!
- Ensure that the appliance is not resting on the power cord.

To install your washing machine, choose a location that is:

1. On a hard, dry, flat surface
2. Not exposed to direct sunlight
3. Adequately ventilated
4. In a room at ambient temperature
5. Away from heat sources

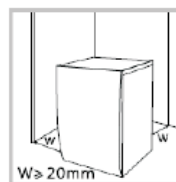

The washing machine is designed to operate at ambient temperature. If it is used in a room where the temperature is below 0°C, the water inlet valve and the drainage system may be damaged.

## Unpacking the washing machine



### **Warning!**

- Packaging materials (e.g. plastic film, polystyrene) can be hazardous to children.
- There is a suffocation hazard! Keep all packaging materials away from children.


1. Remove the cardboard box and the polystyrene wrapping.

2. Lift the washing machine and remove the packaging under it. Don't forget to remove the small foam triangle at the same time as the lower packaging.

If you cannot do so, lay the washing machine on its side and remove the small foam triangle by hand.

3. Remove the adhesive tape that holds the power cord and the drain hose in place.

4. Remove the water supply hose from the drum.

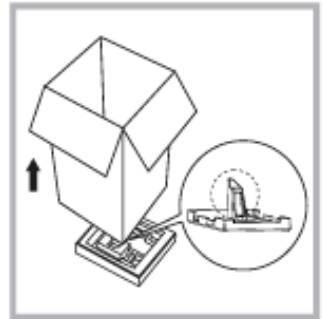




## Fit the acoustic foam (optional)



### Note!

- Fitting acoustic foam helps to reduce noise when the washing machine is in use.

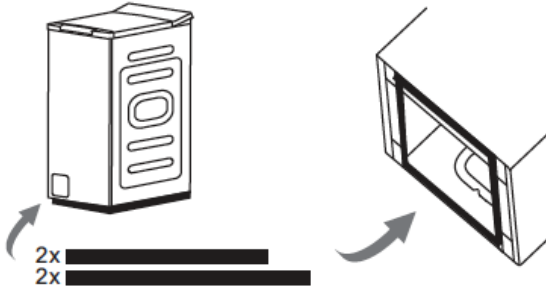

1. Place your washing machine on one of its sides, making sure you protect the floor.
2. Affix the foam as shown on the diagram, using the correct dimensions.

## Remove the transit bolts



### Warning!

- You need to remove all the transit bolts located at the back of the washing machine before using it.
- You'll need the transit bolts again if you move the washing machine. Keep them in a safe place.

Proceed as follows to remove the transit bolts:



1. Use a spanner to loosen the four transit bolts then pull them out.
2. Push the four transit bolt cover caps provided for this purpose into the holes.
3. Keep the transit bolts in a safe place for future reuse.


### Adjusting the levelling feet



#### **Warning!**

- The lock nuts on the four levelling feet must be tightened against the body of the washing machine.

1. Check that the feet are still firmly attached to the washing machine. If this is not the case, return them to their original position and tighten the nuts.
2. Slacken the lock nut and turn the foot until it touches the floor.
3. Adjust the feet and lock them into position using a spanner. Check that the washing machine is stable.

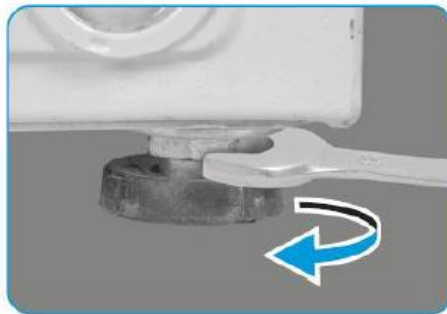

## Connecting the Water Supply Hose



### **Warning!**

- Follow the instructions in this section to avoid water leaks or water damage.
- Don't twist, squash, modify or cut the water supply hose.

Connecting the water supply hose to a threaded tap



Threaded tap and water supply hose

Connect the other end of the water supply hose to the water supply valve located on the back of the washing machine then tighten down the hose by turning it clockwise.



## Drain hose




### **Warning!**

- Do not twist or extend the drain hose.
- Position the drain hose correctly. If you do not perform this operation correctly a water leak may occur.



### **Note!**

- If the washing machine is provided with a drain hose holder, install it as follows:

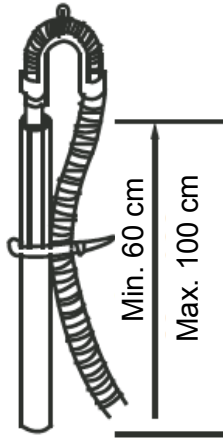

## **Warning!**

- When you install a drain hose, attach it properly using a cord.
- If the drain hose is too long, never attempt to insert part of it into the washing machine by forcing it as this will cause unusual noises.


## Operation

### Quick start

## **Warning!**

- Before using your washing machine for the first time, always ensure that it is correctly installed.
- Before using your washing machine for the first time, perform a complete wash cycle empty.


### 1. Before washing

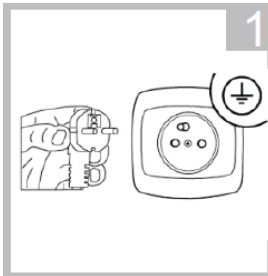


1. Connect the power cord




2. Open the tap

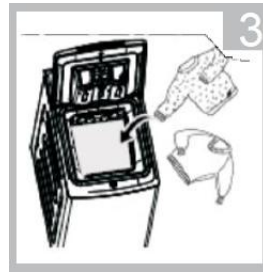


3. Load the washing machine

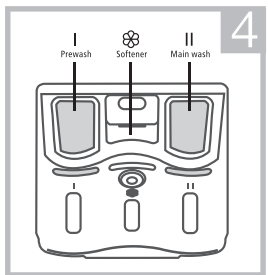

4. Add detergent

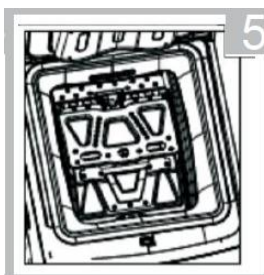


5. Close the drum door

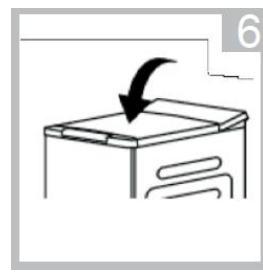


6. Close the door

## ⚠ Warning!


- Make sure that the hook on the drum door is engaged to ensure that the door closes properly.

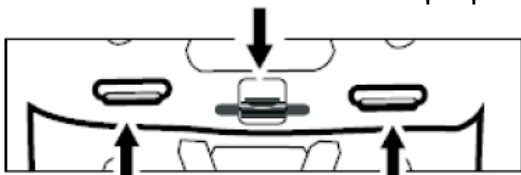

Check the bearings under the hook before each wash. They must run freely.

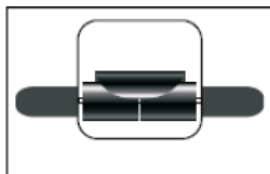

## 2. Washing

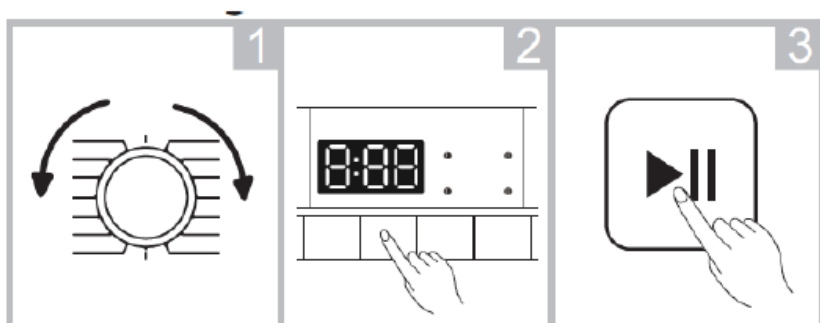

1. Select the programme

2. Select a function or the default settings

3. Start the programme



## Note!







- If you choose to use the default settings, you can skip step 2.

## 3. After washing

“End” is shown on the screen to show you that the cycle is finished.





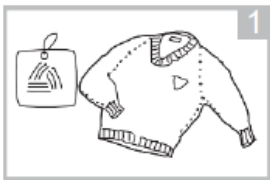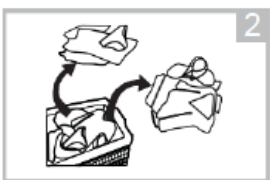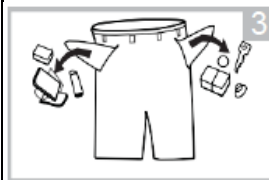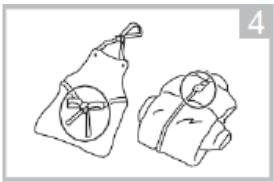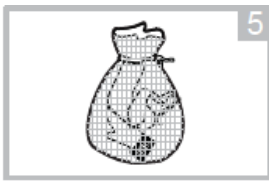

## Before every wash

Always read the washing labels on garments and the explanations on how to use the detergent before washing. Choose detergent that produces little or no foam for optimum washing and to avoid any overflowing. Refer to the instructions provided by the detergent maker as shown on the detergent packaging.

 1	 2	 3
Always read the garment labels	Sort the laundry by type and colour.	Empty the pockets of your clothes
 4	 5	 6
Attach long strings/ribbons, close zips and fasten buttons	Put small laundry items in a laundry bag.	If clothes have raised fabric or suffer from piling, turn them inside out

## Choosing the correct detergent


A washing care label symbol shows the right choice of detergent, temperature, and wash cycle.


Type of fabric		Programme	Detergent
White cotton		Cotton temp. 90°C	Detergent with whitening product
Colours made of linen or cotton		Cotton temp. 60°C	Colours without whitening product
Mixed fibres		Mixed temp. 60°C	Colour wash
Synthetics		Synthetics temp. 60°C	Colour/delicate wash
Delicate textiles		Wool temp. 40°C	Detergent for delicate textiles
Wool		Wool temp. 40°C	Detergent for wool

### **Warning!**

- If there are not enough clothes in the washing machine this may unbalance the drum and cause the unbalance detection to trigger, significantly reducing the spin speed.
- Add a few clothes to remove the unbalance so that the washing machine can spin at the speed you have selected.

### **Detergent compartment**

- I            Prewash detergent  
 II          Main wash detergent  
        Softener

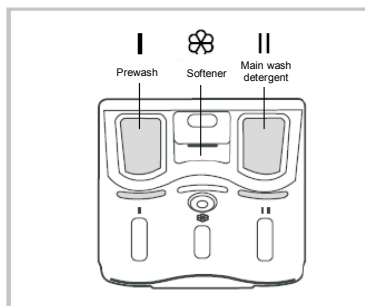



Removable detergent compartment

### **Warning!**

- You will need to put detergent in Compartment I and II you select the Prewash function on washing machines provided with this function.



Programme	I	II		Programme	I	II	
Hygiene		●	○	Spin			
Cotton	○	●	○	Rinse and Spin			○
20°C	○	●	○	Baby care	○	●	○
Mixed	○	●	○	Sport	○	●	○
Wool		●	○	Duvet		●	○
Synthetics	○	●	○	Rapid 45'		●	○
Cotton Eco		●	○	Flash 15'		●	○
Drum clean							

● Must Do

○ Optional

## Washing products

- Use washing products designed specially for washing machines:

- Powdered detergents for all kinds of textiles except delicate ones.


For these detergents, we recommend first diluting them with some water to avoid clogging the detergent pipe causing water to overflow when washing starts.

- Liquid detergents for all low temperature programmes for all kinds of textiles or specialist liquid detergents (e.g. for woollens).

- Choose the detergent with care to match the required washing temperature, to optimise washing while saving water and energy.

Too much detergent may prevent laundry from being properly rinsed, leaving behind traces of the product. On the other hand, an inadequate dosage may cause poor washing results.

## The control panel

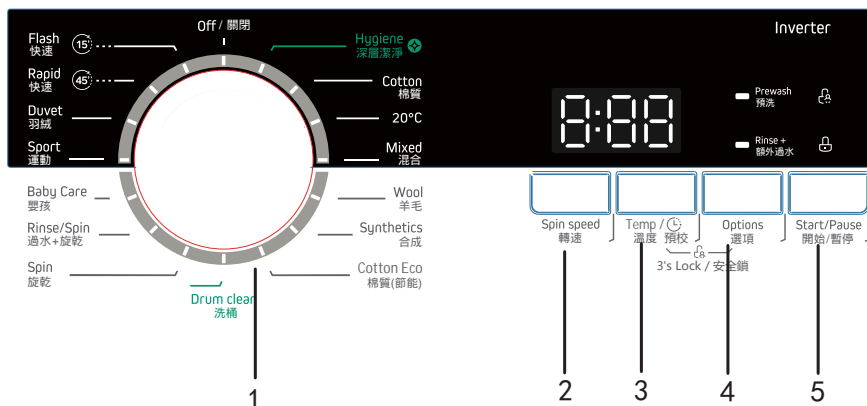

### 1 Programme dial

You can select the programme of your choice to match your washing requirements.

### 2 Spin

By default, a spinning speed associated with the programme is proposed. You can modify it by pressing the Spin button.

### 3 Temperature / Delayed start.

By default, a temperature associated with the programme is proposed. You can modify it by pressing the T°C button.

By holding the T°C button down for more than 3 seconds, you will access the delayed start.


### 4 Options.

Press this button successively to access the Pre-wash or Rinse+ option.

### 5 Start/Pause

Once your selections have been made, press this button to start the wash cycle. Pressing again pauses the cycle.

The screen below informs you about the settings, remaining time and options chosen

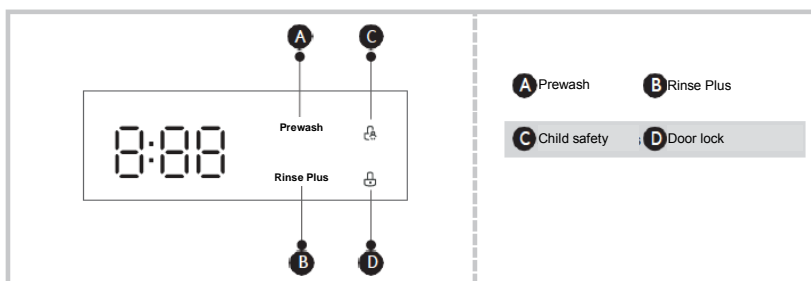



## Note!

There may be a slight smell when the appliance is started and used for the first time.

## Options



### Prewash

The Prewash option lets you perform an additional wash before the main wash. This is a suitable option for eliminating dirt from your laundry.

You will need to place detergent in compartment (I) after choosing this option.



### Rinse +

When this option is selected, your laundry will get an extra rinse.



### Delayed start

Select a programme, followed by the Delayed start function.

1. Press the button for 3 seconds to enter delayed start mode. Select a time between 1 and 24 hours.
2. Select the time required between 1 and 24 hours by keeping your finger pressed on the button.  
The screen shows the time remaining (in hours) before the start of your cycle.
3. Press the Start/Pause button to start the Delayed start function.



Cancelling the delayed start function:

Press Start/Pause, then hold the Temperature/Delayed start button down until 0H shows on the screen.

This operation cannot be performed once the washing cycle is started. If the programme has already started, place the selector in the Off position to reset it.



### Spin

Press the "Spin" button until the required spin speed is displayed: 0-400-600-800-1000-1200- 1300. Access to the choice is linked to the programme selected.



### Temperature

Press the T°C button until the required temperature is obtained: Cold-20-30-40-60-90. Access to the choice is linked to the programme selected.



## Warning!


- If a power break occurs when the washing machine is running, the internal memory saves the selected programme. Once the power has returned, press the **Start/Pause** button to resume the programme.



### Child safety lock

This function locks the buttons so that the current programme cannot be changed especially if a child plays with the keys.



Press T°C/Delayed start at the same time for 3 seconds, until the icon  appears. The display alternately shows CL and the time remaining.



## Warning!

- To disable the Child safety lock, press the same two buttons for three seconds. The display alternately shows CL and the time remaining. At the end of the cycle, “End” appears on the screen and the Child safety lock LED stays on.
- The “Child safety” function will lock all of the buttons except the selector.
- If you switch off the appliance, the Child safety lock will be disabled.
- The Child safety function remains active when the washing machine restarts after a power break.



### Switching off the audible beep

Press the Spin button for 3 seconds to switch off the audible beep. Perform the same action to restart it.







 

 
 

 
 
 
 
 
 
 
 
 
 

 

 
 

 





The last setting will be retained until the next reset.



### Warning!

- After switching off the audible beep, the appliance no longer makes any sound.

### Options table

	Default temperature (°C)	Possible options
Hygiene	70	 ,  , 
Cotton	40	 ,  , 
20°C	20	 ,  , 
Mixed	40	 ,  , 
Wool	40	 , 
Synthetics	40	 ,  , 
Cotton Eco	--	
Drum clean	90	
Spin	--	
Rinse and Spin	--	 , 
Baby care	60	 ,  , 
Sportswear	20	 ,  , 
Duvet	40	 , 
Rapid 45'	40	 , 
Flash15'	Cold	

## Programmes

The programmes are adapted to the kind of laundry.

Quick 15'	This programme is used to very quickly wash a small load of laundry that is not very dirty.
Rapid 45'	This programme is used to quickly wash a usual load of laundry that is not very dirty.
Duvet	This programme is used to wash duvets without damaging their appearance.
Sport	This washing programme is designed to preserve the elastic fibres in sportswear so that they do not stretch and they retain their technical properties.
Baby care	This programme improves rinse performance to remove as much detergent residue as possible. This serves to better protect a baby's skin.
Spin	This programme is used to only spin your clothes by choosing the desired spin speed.
Rinse and Spin	This programme is used to simply rinse and spin your clothes.
Hygiene	This programme eliminates the main viruses and up to 99.9% of bacteria from your clothes and face coverings, thanks to a reinforced 30-minute washing phase at a stabilised temperature of 70°C.
Cotton	This programme is suited to a load consisting of resistant white or coloured cotton. To know which washing temperature is suitable, refer to the labels on your clothing.
20°C	This low temperature washing programme is recommended for washing and protecting colours.
Mix	This programme is ideal for a load consisting of mixed fibres.
Wool	This programme is specially intended for protecting your woollens. Thanks to longer soaking periods, your woollens will be washed gently.
Synthetics	This programme is ideal for a load consisting of resistant synthetics.
Cotton Eco	This programme is used to wash your laundry at a temperature that cannot be changed, while optimising water and power consumption.
Drum clean	This special programme is used to disinfect the machine at a temperature of 90°C.

Programme	Capacity (kg)	Default cycle time
Hygiene	4.0	2:27
Cotton	8.0	2:40
20°C	4.0	1:01
Mixed	4.0	1:20
Wool	2.0	1:07
Synthetics	4.0	2:20
Cotton ECO	8.0	3:38
Drum clean	-	1:18
Spin	8.0	0:12
Rinse and	8.0	0:20
Baby care	8.0	2:01
Sportswear	4.0	0:45
Duvet	2.5	1:27
Rapid 45'	usual load	0:45
Flash 15'	2.0	0:15

BT813HQA						
Cycle	Nominal capacity in kg	Cycle duration in hours and minutes	Energy consumption in kWh/operalling cycle	Water consumption in liter/operalling cycle	Highest temperature ature°C <sup>1)</sup>	Residual moisture in%/spin speed <sup>2)</sup>
Quick 15'	2.0	0:15	0.026	34	Cold	70%/800
20°C	4.0	1:01	0.183	47	20	65%/1000
Cotton 60°C	8.0	2:45	1.394	71	60	65%/1000
Synthetics	4.0	2:20	0.625	47	40	65%/1000
Mix 40°C	8.0	1:20	0.784	71	40	65%/1000
Cotton ECO	8.0	3:38	1.028	57.4	44	53.9%/1300
	4.0	2:42	0.559	46.6	34	53.9%/1300
	2.0	2:42	0.238	38.1	22	53.9%/1300

- The above data is for reference only, and the data may change due to different actual use conditions.
- The valves given for programmes other than the Cotton ECO programme are indicative only.
- Concerning to EN 60456:2016/prA2019 With (EU)2019/2014, (EU)2019/2023, The EU energy efficiency class is: C  
Energy test program: Cotton ECO. Other as the default.  
Half load for 8.0kg machine:4.0kg.  
Quarter load for 8.0kg machine:2.0kg.

## Maintenance operations

### Cleaning and Care




#### **Warning!**

- Always switch off the appliance and turn off the water tap before any maintenance operations.

### Cleaning the exterior of your washing machine

Suitable maintenance will optimise the service life of your washing machine. Appliance surfaces can be cleaned with neutral non-abrasive detergents diluted where necessary. If the water overflows, wipe it up immediately.

Never use sharp objects.

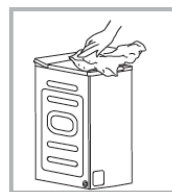

#### **Note!**

- Do not use formic acid and its diluted solvents or equivalents such as alcohol, solvents or chemicals, etc.

### Cleaning the drum

Any rust left inside the drum by metal articles must be removed immediately with chlorine-free detergent.

Never use steel wool.



#### **Note!**

- Don't put laundry in the washing machine during the drum cleaning.




## Cleaning the water supply hose filter



### Note!

- If there is hardly any water in the appliance and the tap is open, then the water supply hose filter needs to be cleaned.

1. Close the tap
2. Remove the Water Inlet Hose from the tap.
3. Clean the filter.
4. Reconnect the water inlet hose.

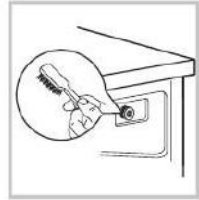

## Cleaning the washing machine filter




5. Unscrew the water inlet hose from the back of the machine.
6. Remove the filter using a pair of pliers.
7. Use a brush to clean the filter.
8. Refit the filter once cleaning is finished.
9. Reconnect the water inlet hose.

## Cleaning the detergent compartment

If you observe any dirtying of the detergent drawer, clean it.

To do this:

1. Remove the detergent drawer by pressing the arrow on the softener compartment (shown as A below).
2. Clean with water.
3. Put the compartment back.

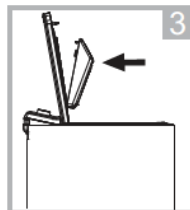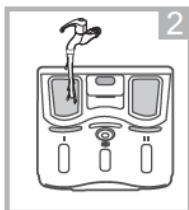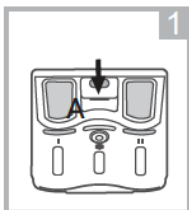

### Note!


- Do not use alcohol, solvents or chemicals to clean the washing machine.

## Cleaning the drain pump filter



### Warning!

- Beware of hot water!
- Disconnect the appliance to avoid any electric shock hazard.
- The drain pump filter filters out lint and other small debris present in the laundry.
- Clean the filter regularly to ensure proper washing machine operation.

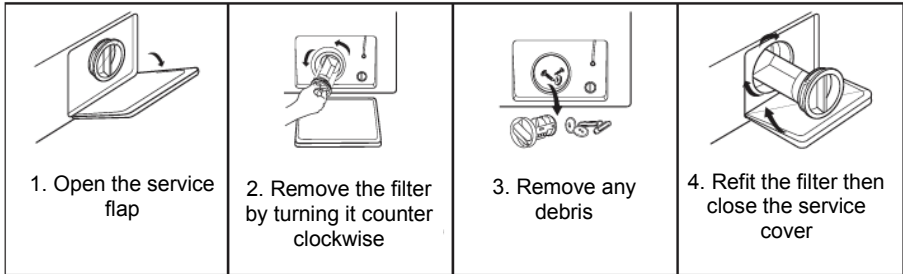

### Warning!

- Ensure that the filter is properly refitted to avoid any leakage.
- When the washing machine is running, never remove the filter. This operation must only be performed with the washing machine switched off.

## Preventing scale build-up

If you live in an area with hard water, we recommend using a washing machine descaling product. Regularly check for any scale build-up in the drum. If necessary, run an empty washing cycle with a descaling product. Refer to the instructions provided by on the product packaging.

## Troubleshooting

The washing machine cannot start up or stops during operation.  
First attempt to solve the problem. If you cannot, then contact the service centre.

Description	Cause	Solution
Washing machine cannot start up	The door is not properly closed	Switch the washing machine back on after closing the door Check whether any clothes are trapped
Door cannot be opened	Washing machine's safety protection system is working	Disconnect the power, reconnect it and switch the machine back on
Water leakage	The connection between the washing machine and the water supply hose or the drain hose is not tight	Check the water pipes and tighten the connections Clean the drain hose
Detergent residues in the detergent compartment	The detergent is dampened and agglomerated	Clean and dry the compartment
Washing machine lights or display do not light up	The appliance is not switched on. Circuit problem. Connection problem.	Check that the power is on and that the power cord is properly connected.
Unusual noise		Make sure that the fixing bolts have been removed Make sure that the washing machine is installed on a solid and level floor

Description	Cause	Solution
<b>E30</b>	The door is not properly closed	Close the door properly and restart the washing machine. Check whether any clothes are trapped
<b>E 10</b>	Problem adding water during washing	Check whether the water pressure is too low. Straighten the water supply hose. Check the water supply filter is not blocked
<b>E 21</b>	Water drainage takes too long	Check if the drain hose is blocked
<b>E 12</b>	Water leakage	Run another programme If the error code is still displayed, turn off the water supply, disconnect the washing machine and call your after sales service.
<b>E xx</b>	Others	Do not hesitate to reset the washing machine Contact our after sales service if the issues remain



### Note!

- Once this check is complete, start the appliance. If the problem occurs again or if the error codes are displayed again, contact your after-sales service.
- Any attempt made by the user or a non professional to repair the appliance may affect user safety and void the appliance warranty.

## Performing your own repairs


Some repairs may be carried out by the user in certain cases. The [sav.groupebrandt.com](http://sav.groupebrandt.com) website offers you the option of ordering certain spare parts as well as bringing you access to technical data and safety instructions to guide you through troubleshooting. In line with the stipulations of Article L441-5 of the French Consumer Code (Code de la Consommation), the manufacturer cannot be held liable for any damage that occurs while performing your own repairs inasmuch as this damage is linked to improper procedures by the user or any failure by the latter to follow the instructions for repairing the product.

## Availability of spare parts

The minimum period of availability for spare parts listed in European Regulation 2019-2023-EU and accessible in particular to the appliance user is 10 years under the terms set out in this regulation.

## Technical specifications

Power supply	220-240V~, 50Hz
Maximum current	10 A
Standard water pressure	0.1 MPa-1 MPa

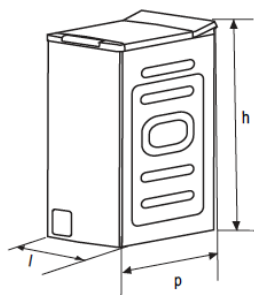

Model	Washing capacity	Dimensions (l * d * h mm)	Net weight	Rated power
BT813HQA	8.0kg	400*610*875	56kg	2000W

## SERVICING AND REPAIRS



Any repairs that are made to your appliance must be handled by a qualified professional authorised to work on the brand. When calling, please provide the full references of your appliance [commercial reference, service reference, serial number), so that we can handle your call more efficiently. This information can be found on the data plate



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the European Union.



For more information, please contact the local authority or your retailer where you purchased the product.