

# ***Brandt***

INSTALLATION & USER GUIDE

## **Washer Dryer**



# CONTENTS

|                                   |    |
|-----------------------------------|----|
| Safety instructions .....         | 3  |
| Installation .....                | 7  |
| Operation .....                   | 13 |
| Maintenance operations .....      | 27 |
| Troubleshooting .....             | 31 |
| Availability of spare parts ..... | 33 |

## Safety instructions

- This appliance is designed to be used for domestic and similar applications such as:
  - kitchen areas for staff in shops, offices and other professional premises,
  - farms;
  - use by hotel, motel and other residential clients;
  - B&B type environments.
- The appliance must be connected to the mains water supply using the brand new connection fittings supplied with the appliance. Never reuse old fittings.
- Never obstruct the ventilation openings.
- This appliance may be used by children aged 8 years or more and by people with physical, sensual or mental deficits and lacking experience or knowledge of the device provided that they are correctly supervised or have been provided with instructions regarding the safe use of the appliance and provided that the risks present have been fully understood. Children must not play with the appliance.. Cleaning and maintenance operations must not be carried out by children without supervision.
- Children under the age of three should be kept away from the appliance unless they are under constant supervision.
- If the power cord is damaged, it should be replaced by the manufacturer, its after-sales service department or a similarly qualified person, so as to avoid danger.
- Regarding the instructions for installing the appliance and making its electrical connections, please refer to the appropriate section in this guide.

**WARNING:** Do not connect the appliance to a hot water supply.

- The maximum weight of dry laundry is 8 kilograms for the wash cycle.
- The maximum weight of dry laundry is 6 kilograms for the wash-dry or dry cycle.
- Maximum water supply pressure: 1 MPa
- Minimum water supply pressure: 0,05MPa

## **⚠ Warning!**

### **Product installation**

- This washer dryer is intended for indoor use only.
- It is not designed for built-in installation. Never obstruct the openings.
- This washer dryer must not be installed in bathrooms, very damp rooms, or in rooms where there are explosive gasses or caustic substances.
- If the appliance has only one water inlet valve, connect it to a cold water source only.
- The power plug must remain accessible after the appliance is installed.
- Remove all packaging materials and the transit bolts before using the appliance. Failure to do so may seriously damage your washer dryer.

### **Appliance damage hazard!**

- Your appliance is for household (domestic) use only and is designed solely for machine washable textiles.
- Do not climb on the top of the appliance.
- Do not lean against the door of the washer dryer.

## Care when handling the washer dryer:

1. The transit bolts must be refitted to the washer dryer by a qualified person.
2. Drain any water from the appliance before moving the washer dryer.
3. Handle the appliance with care. Never lift the appliance by grabbing projecting parts. The door must not be used as a handle when moving the appliance.
4. This appliance is heavy. Carry it with care.
5. Do not put any objects in the water drain tray.
  - Do not close the door using excessive force. If the door is hard to close, make sure that the drum is not overloaded and that the laundry is properly distributed.
  - Do not wash carpets.

## Risk of explosion!

- Do not wash or dry articles that have been cleaned, washed, or soaked with flammable or explosive substances (e.g. wax, petroleum, paint, petrol, degreasing agents, dry cleaning solvents, kerosene, etc.), as they are a fire or explosion hazard.
- The drying cycle should not be used if articles have been washed with industrial chemicals.
- The extracted air must not be evacuated into a duct used to evacuate fumes from appliances using gas or other fuels.
- Hand-wash and thoroughly rinse these articles before placing them in the appliance.

## Operation of the appliance


- Before using the appliance for the first time, perform a complete wash cycle empty.
- Use of inflammable and explosive solvents is prohibited. Never use fuel and alcohol, etc. as detergents. Only choose detergents that are suitable for machine washing.
- Empty the pockets of your clothes. Cutting and rigid objects like coins, pins, nails, screws, stones, etc. may seriously damage this appliance.
- Check that the water inside the drum has been drained before opening the door. Do not open the door if you can still see water inside

the washer dryer.

- Be careful to avoid injury when draining very hot washing water.
- Never add water by hand during washing.
- Once the washing cycle has finished, wait two minutes before opening the door.
- If it is impossible to avoid using the washer dryer to clean fabrics soiled with hair care products, vegetable or frying oils, first wash them in hot water with extra detergent to reduce the risk (but without eliminating it).
- Provide adequate ventilation to prevent the backflow of gases from nearby appliances that burn other fuels, including open fireplaces.
- Do not dry articles made of foam rubber (latex foam), shower caps, waterproof fabrics, items and clothing covered with rubber, and foam rubber pillows in the machine.
- Follow the instructions on the clothing when using fabric softeners or similar products.
- The last part of a drying cycle consists of a cooling cycle to reduce the temperature of the items and prevent them being damaged.
- **WARNING:** Never stop the appliance before the end of the drying cycle unless you quickly remove and hang up all the items to disperse the heat.

# Installation

## Description of the product

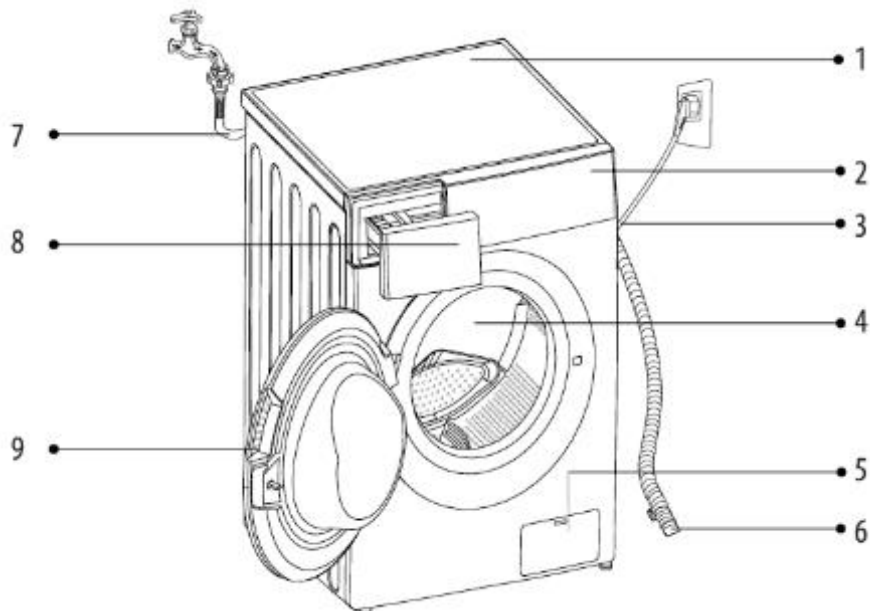




- |                  |                          |
|------------------|--------------------------|
| 1. Top panel     | 6. Drain hose            |
| 2. Control panel | 7. Water supply hose     |
| 3. Power cord    | 8. Detergent compartment |
| 4. Drum          | 9. Window                |
| 5. Filter        |                          |



### Note!

- The illustration of the accessories is provided for reference purposes only. Please refer to the actual product.
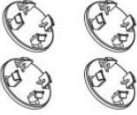
## Accessories

|   |   |   |
|---|---|---|
|  |  |  |
| Transit bolt hole covers  | Cold water supply hose  | User guide  |


## Installation location

### **Warning!**

- It is important that the product is stabilised to prevent it from moving!
- Ensure that the appliance is not resting on the power cord.

To install your washing machine, choose a location that is:

1. On a hard, dry, flat surface
2. Not exposed to direct sunlight
3. Adequately ventilated
4. In a room at ambient temperature
5. Away from heat sources

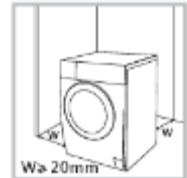

The washer dryer is designed to operate at ambient temperature. If it is used in a room where the temperature is below 0°C, the water inlet valve and the drainage system may be damaged.



## Unpacking the washer dryer

### **⚠ Warning!**

- Packaging materials (e.g. plastic film, polystyrene) can be hazardous to children.
- There is a suffocation hazard! Keep all packaging materials away from children.

1. Remove the cardboard box and the polystyrene wrapping.
2. Lift the washer dryer and remove the packaging under it. Don't forget to remove the small foam triangle at the same time as the lower packaging. If you cannot do so, lay the washing machine on its side and remove the small foam triangle by hand.
3. Remove the adhesive tape that holds the power cord and the drain hose in place.
4. Remove the water supply hose from the drum.



## Remove the transit bolts

### **⚠ Warning!**

- You need to remove all the transit bolts located at the back of the washer dryer before using it.
- You'll need the transit bolts again if you decide to move the appliance. Keep them in a safe place.

Proceed as follows to remove the transit bolts:

1. Use a spanner to loosen the four transit bolts then pull them out.
2. Push the four transit bolt cover caps provided for this purpose into the holes.
3. Keep the transit bolts in a safe place for future reuse.



### Adjusting the levelling feet

#### **⚠ Warning!**

- The lock nuts on the four levelling feet must be tightened against the washer dryer body.

1. Check that the feet are still firmly attached to the washer dryer. If this is not the case, return them to their original position and tighten the nuts.
2. Slacken the lock nut and turn the foot until it touches the floor.
3. Adjust the feet and lock them into position using a spanner. Check that the washer dryer is stable.



## Connecting the Water Supply Hose

### **⚠ Warning!**


- Follow the instructions in this section to avoid water leaks or water damage.
- Don't twist, squash, modify or cut the water supply hose.

Connecting the water supply hose to a threaded tap



Threaded tap and water supply hose

Connect the other end of the water supply hose to the water supply valve located on the back of the washer dryer, then tighten the hose by turning it clockwise.

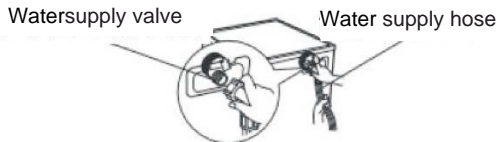


**⚠ Warning!**

- Do not twist or extend the drain hose.
- Position the drain hose correctly. If you do not perform this operation correctly a water leak may occur.

**Note!**

- If the washer dryer is provided with a drain hose holder, install it as follows:

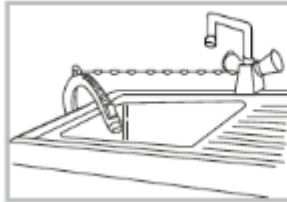

### **⚠ Warning!**

- When you install a drain hose, attach it properly using a cord.
- If the drain hose is too long, never attempt to insert part of it into the washing machine by forcing it as this will cause unusual noises.

## Operation

### Quick Start


### **⚠ Warning!**


- Ensure that your washer dryer is correctly installed before using it.
- Before using it for the first time, perform a complete wash cycle empty.

Calibrating the appliance is recommended to increase its efficiency. To do this:


1. Empty the drum
2. Plug the appliance in
3. Switch on the appliance and within 10 seconds simultaneously press Delayed Start and Spin. The indication T19 appears.
4. Press Start and wait for these “\*\*\*\*” symbols to appear on the screen.

### 1. Before washing

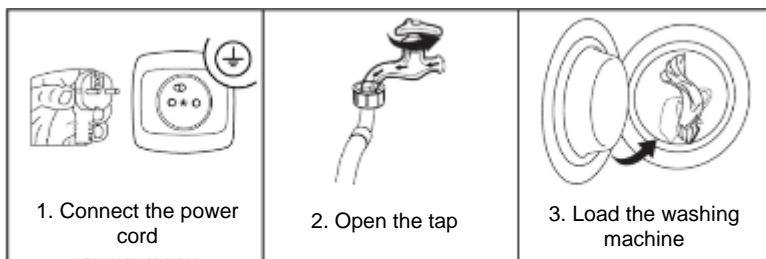

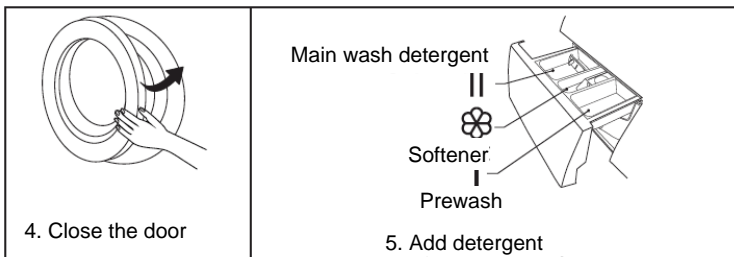

## 2. Washing

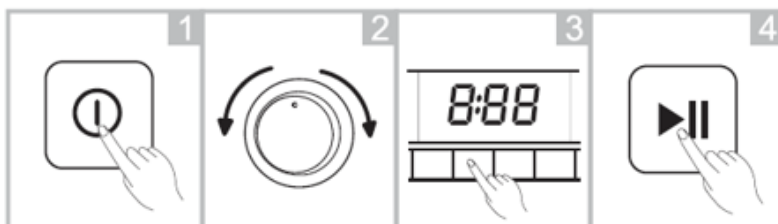

1. Switch on the appliance

2. Select the programme

3. Select a function or the default settings

4. Start the programme

### Note!







- If you choose to use the default settings, you can skip step 3.

## 3. After washing

An audible beep is heard or "End" is displayed on-screen.

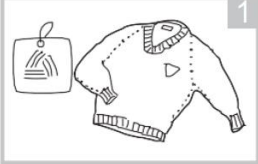




 
## Before every wash

Always read the washing labels on garments and the explanations on how to use the detergent before washing. Choose detergent that produces little or no foam for optimum washing and to avoid any overflowing. Refer to the instructions provided by the manufacturer as shown on the detergent packaging.

|   |  |   |
|---|--|---|
|  <p>1</p> <p>Always read the garment labels</p>          |  <p>Empty the pockets of your clothes.</p>  |  <p>4</p> <p>Attach long strings/ribbons, close zips and button buttons</p> |
|  <p>5</p> <p>Place small size clothes in pillowcases</p> |  <p>6</p> <p>If clothes have raise fabric or suffer from piling, turn them inside out</p> |  <p>Sort clothes by texture</p>   |

## Choosing the correct detergent

A washing care label symbol shows the right choice of detergent, temperature, and wash cycle.

| Type of fabric                  |   | Programme               | Detergent                         |
|---------------------------------|---|-------------------------|-----------------------------------|
| White cotton                    |  | Cotton Temp. s. 90°C    | Laundry with whitening product    |
| Colours made of linen or cotton |  | Cotton Temp. s. 60°C    | Colours without whitening product |
| Mixed fibres                    |  | Mixed Temp. s. 60°C     | Colour wash                       |
| Synthetics                      |  | Synthetic Temp. s. 60°C | Colour/delicate wash              |
| Delicate fabrics                |  | Wool Temp. s. 40°C      | Detergent for delicate textiles   |
| Wool                            |  | Wool Temp. s. 40°C      | Detergent for wool                |

### **Warning!**


- If there are not enough clothes in the machine, this may unbalance the drum and cause the unbalance detection to trigger, significantly reducing the spin speed.
- Add a few clothes to rebalance the drum so that the washing machine can spin at the speed you have selected.


### **Detergent compartment**

I Prewash detergent

II Main wash detergent

 Softener

 Press the button to extract the product compartment.

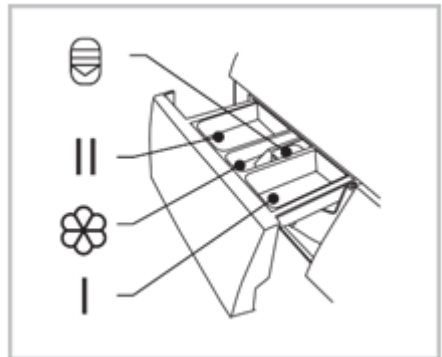

### **Warning!**

- You only need to put detergent in Compartment I if you selected the Prewash function on washing machines provided with this function.



| Programme  | I | II | ☼ | Programme        | I | II | ☼ |
|------------|---|----|---|------------------|---|----|---|
| Hygiene    |   | ●  | ○ | Drum clean       |   |    |   |
| Cotton     | ○ | ●  | ○ | Spin             |   |    |   |
| Synthetics | ○ | ●  | ○ | Wash + dry       |   | ●  | ○ |
| Mixed      | ○ | ●  | ○ | Dry              |   |    |   |
| Wool       |   | ●  | ○ | 20°C             |   | ●  | ○ |
| Duvet      | ○ | ●  | ○ | Wash and Dry 60' |   | ●  | ○ |
| ECO 40-60  |   | ●  | ○ | Rapid 45'        | ○ | ●  | ○ |
| Intensive  |   | ●  | ○ | Flash 15'        |   | ●  | ○ |













● Must do ○ Optional

## Washing products

- Use washing products designed especially for washing machines:
  - Powdered detergents for all kinds of textiles except delicate ones. For these detergents, we recommend first diluting them with some water to avoid clogging the detergent pipe causing water to overflow when washing starts.
  - Liquid detergents for all low temperature programmes for all kinds of textiles or specialist liquid detergents (e.g. for woollens).
- Choose the detergent with care to match the required washing temperature, to optimise washing while saving water and energy. Too much detergent may prevent laundry from being properly rinsed, leaving behind traces of the product. On the other hand, an inadequate dosage may cause poor washing results.

## Clothing care labels for drying.

Items of clothing have their own washing instruction label and it is recommended that you follow the drying guidelines explained below.


|  |   |   |   |
|--|---|---|---|
| <br>Dry                       | <br>Dry in a dryer   | <br>Do not dry in a dryer      | <br>Do not dry                                   |
| <br>Air dry / Hang out to dry | <br>Drip dry         | <br>Dry flat                   | <br>Dry in the shade                             |
| <br>Dry clean                 | <br>Do not dry clean | <br>Dry clean with any solvent | <br>Dry clean, only with petroleum based solvent |

Wash and dry new dark coloured clothes separately from light coloured clothes to prevent colours from bleeding and discolouring other clothes or even plastic components inside the dryer. Dark coloured fibres can cause colours to bleed into light coloured clothing and vice versa.

Never dry items containing rubber or plastics such as:

- aprons, bibs, and chair covers
- curtains and tablecloths
- bath mats.

# The control panel

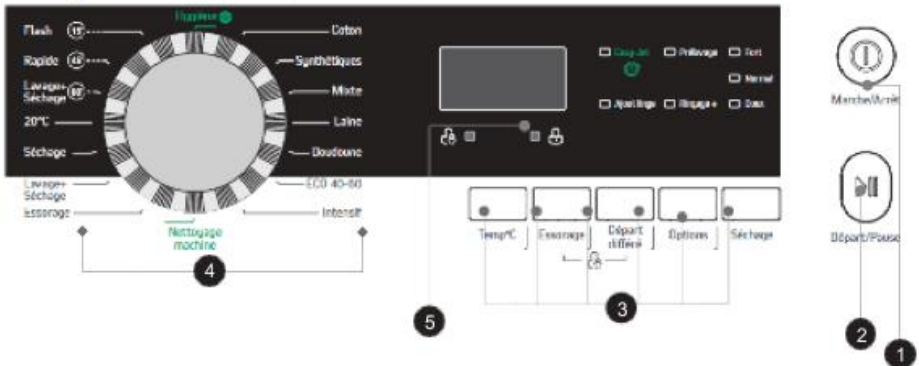

## 1 On/Off

This button turns your washer dryer on or off.

## 3 Options

These buttons are used to select an extra function and will light up when selected.

## 5 Display

The display shows the settings, the time remaining, and information on the washing in progress. It remains lit for the entire cycle.

## 2 Start/Pause

Press to start the selected wash cycle. Press during the cycle to pause it.

## 4 Program dial

You can select the programme of your choice to match your washing requirements.

### A Display

Delayed start Wash time

125 2h  
Speed Error

E 30  
End Temp.

B Child safety

C Easy Jet


D Add wash

E Door safety

F Prewash

G Rinse +

H Drying level

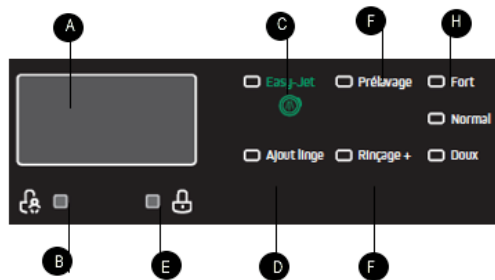

## **Warning!**

If you need to change a setting after the washing cycle has started, press the On/Off button once to turn off the machine. Press the On/Off button a second time to turn the machine back on and select the program, spin speed, options, then press the Start/Pause button. (Ensure that the child safety function is disabled or the initially selected programme will continue to run.)

Just before leaving the factory, the appliance is subject to a last check when water is poured into the drum. Consequently, there may be water drops or condensation inside the washing machine. This is not an indication of a malfunction.

## **Note!**

There may be a slight smell when the appliance is started and used for the first time.

## **Options**



### **Prewash**

The Prewash option lets you perform an additional wash before the main wash. This is a suitable option when your laundry is very dirty. You will need to place detergent in compartment (1) after choosing this option.



### **Rinse +**

When this option is selected, your laundry will get an extra rinse.



### **Delayed start**

Setting the delayed start function:

1. Choose the time by pressing the Delayed start function (you can select a delay from 0 to 24 hours).
2. Press the Start/Pause button to start the Delayed start function.



Setting the time



Start/Pause

Cancelling the delayed start function:

Press the Delayed start button until 0H is displayed. This operation cannot be

performed once the washing cycle is started. If the program has already started, press the On/Off button to reset the machine.

Temp.

### Temperature

Press the Temperature button until the desired temperature is obtained. (Cold, 20°C, 30°C, 40°C, 60°C, 90°C)



### Spin

Press the spin speed button until the desired spin speed is displayed. 0-400-600-800-1000-1200-1400



 
### Easy-Jet

This automatic function cleans the door seal and glass window during the cycle. Water is sprayed to remove suds and laundry residue.



### Drying level

Press and hold the Drying button to choose the desired drying level:



**Extra:** Select this function if you want to wear the clothes as soon as the drying cycle is completed.
























**Normal:** This function is recommended for clothes that are ready to be put away in the cupboard or ironed.

**Mild:** Gently dries cloths that are not too wet.

## Note!

- Drying advice
  - Clothes can be dried after spinning.
  - For the best drying results, regroup fabrics by type and drying temperature.
  - Synthetic clothing should be dried for a fixed period of time.
  - Leave clothes on a hanger for a while if you want to iron them after drying.
- Unsuitable clothing for drying
  - Particularly delicate items such as synthetic, woollen, or silk curtains, clothing incorporating metal parts, nylon stockings, heavy clothing, such as anoraks, bedspreads, eiderdowns, sleeping bags, and duvets should not be dried.
  - Do not dry clothes filled with foam rubber or similar materials.
  - Fabrics containing residues of hairspray or gel, nail polish remover or similar substances should not be machine dried to avoid the potential accumulation of dangerous fumes.

## Options table

| Cycle            | Default temperature (°C) | Default spin speed (rpm) | Additional functions  |
|------------------|--------------------------|--------------------------|---|
| Hygiene          | 70                       | 800                      | Delayed start  ,    |
| Cotton           | 40                       | 1500                     | Delayed start  ,  ,    |
| Synthetic"       | 40                       | 1200                     | Delayed start  ,  ,  ,  |
| Mix              | 40                       | 1000                     | Delayed start  ,  ,  ,  |
| Wool             | 40                       | 600                      | Delayed start    |
| Duvet            | 40                       | 1000                     | Delayed start  ,    |
| ECO 40 60        | --                       | 1500                     | Delayed start   |
| Intensive        | 40                       | 800                      | Delayed start   |
| Drum clean       | 90                       | --                       | Delayed start   |
| Spin             | --                       | 1000                     | Delayed start   |
| Wash and Dry     | --                       | 1500                     | Delayed start    |
| Dry              | --                       | 1500                     | Delayed start    |
| 20°C             | 20                       | 1000                     | Delayed start  ,    |
| wash and dry 60' | Cold                     | 1500                     | Delayed start    |
| Rapid 45'        | 40                       | 800                      | Delayed start  ,    |
| Flash 15'        | Cold                     | 800                      | Delayed start   |


## **Warning!**

- If a power break occurs when the washer dryer is running, the internal memory saves the selected program. Once the power has returned, press the **Start/Pause** button to resume the programme.

## **Child safety**



This function locks the buttons so that the current program cannot be changed especially if a child plays with the keys.

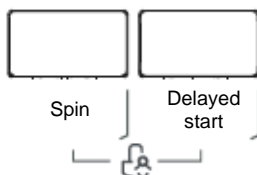

Press Spin and Delayed start at the same time for three seconds, until a beep is heard. The Lock indicator lights up. The display alternately displays "CL" and the time remaining.

## **Warning!**

- To disable the Child safety lock, press the same two buttons for three seconds.
- The "Child safety" function will lock all the buttons except the On/Off button and the ones used to deactivate it. The lock indicator will flash for 3sec when any other button is pressed.
- The "Child safety" function remains active when the washing machine restarts after a power break.

## **Switching off the audible beep**



Press the **Temperature** button for 3 seconds to switch off the audible beep.

Perform the same action to restart it.

The last setting will be retained until the next reset.

 **Warning!**

- After switching off the audible beep, the appliance no longer makes any sound.

This can be performed during a wash cycle. For safety reasons, this can only be performed when the water level and temperature are not too high. When this is the case, press the Start/Pause button for 3 seconds then:

Add wash

1. Wait for the drum to stop moving completely and the door to unlock.
2. Add the washing
3. Close the door again and press the Start/Pause button.



## Programmes

The programmes are adapted to the kind of laundry.

### Programmes

|                  |   |
|------------------|---|
| Cotton           | This programme is suited to a load consisting of resistant white or coloured cotton.  |
| Rapid 45'        | An exclusively short cycle, the Quick 45' program lets you wash a load of moderately dirty laundry in record time.  |
| Mix              | This programme is ideal for a load consisting of mixed fibres.  |
| 20°C             | This low temperature washing programme is recommended for washing and protecting colours.   |
| Drum clean       | The 90°C Drum clean program (without laundry) cleans all the parts of your machine (drum, tank, pipes, seals, etc.) and guarantees that your laundry is washed in perfectly hygienic conditions. It also prevents the development of unpleasant odours. |
| Spin             | Use this programme if you only need to spin your clothes.   |
| ECO 40-60        | This programme is used to wash your laundry at 40°C (a temperature that cannot be changed), while optimising water and power consumption.   |
| Hygiene          | This program eliminates the main viruses and up to 99.9% of bacteria from your clothes and masks, thanks to a reinforced 30 minute washing phase at a stabilised temperature of 65°C.   |
| Wash and Dry 60' | This program is limited to small loads, making it ideal for quickly washing and drying 4 shirts, for example.   |
| Wash and Dry     | This program is used to run a washing cycle followed by a drying cycle for a normal load of laundry.  |
| Dry              | Dries your clothes, with the drying time adapted to the amount of laundry loaded. You can adjust the drying level by selecting the "drying" button.   |
| Wool             | This program is specially designed for washing woollens completely safely.<br>Thanks to longer soaking periods, your woollens will be washed gently.  |
| Intensive        | This programme is intended for dirty laundry, increasing the drum rotation rate and cycle time.   |
| Duvet            | This program is used to wash duvets without damaging their appearance.  |
| Synthetics       | This programme is ideal for a load consisting of resistant synthetics.  |
| Flash 15'        | This programme is used to very quickly wash a small load of laundry that is not very dirty.   |

## Washing programme table

### WDB104QW

| Programme          | Washing / drying capacity (kg) | Displayed time |
|--------------------|--------------------------------|----------------|
|                    | 10.0                           | 10.0           |
| ❖ Hygiene          | 5.0/5.0                        | 2:27           |
| ❖ Cotton           | 10.0/7.0                       | 3:39           |
| ❖ Synthetics       | 5.0/5.0                        | 3:28           |
| ❖ Mix              | 10.0/7.0                       | 1:30           |
| Wool               | 2.0                            | 1:07           |
| Duvet              | 2.0                            | 1:48           |
| ECO 40-60          | 10.0                           | 3:59           |
| Intensive          | 10.0                           | 3:48           |
| Drum clean         | -                              | 1:18           |
| Spin               | 10.0                           | 0:12           |
| ❖ Wash and spin    | 7.0/7.0                        | 6:44           |
| ❖ Dry              | -/7.0                          | 4:33           |
| 20°C               | 5.0                            | 1:11           |
| ❖ Wash and dry 60' | 1.0/1.0                        | 0:58           |
| Rapid 45'          | 2.0                            | 0:45           |
| Flash 15'          | 2.0                            | 0:15           |

The EU energy efficiency classification is: B.

Energy efficiency test programme: ECO 40-60.

Speed: the highest; other settings are set to their default values.

Half-load for a washing machine with a capacity of 10.0kg: 5.0kg.

For WELS (Water Efficiency Labeling Scheme) Singapore, ECO 40-60 is the recommended program for normally soiled load equal to the rated capacity.

# Maintenance operations

## Cleaning and maintenance

### **Note!**

- Always switch off the appliance and turn off the water tap before any maintenance operations.

## Cleaning the exterior of your washer dryer

Suitable maintenance will optimise the service life of your washer dryer. Appliance surfaces can be cleaned with neutral non-abrasive detergents diluted where necessary. If the water overflows, wipe it up immediately. Never use sharp objects.



### **Note**

- Do not use formic acid and its diluted solvents or equivalents such as alcohol, solvents or chemicals, etc.

## Cleaning the drum

Any rust left inside the drum by metal articles must be removed immediately with chlorine-free detergent. Never use steel wool.

### **Note**

- Don't put laundry in the washer dryer during the drum cleaning.

## Cleaning the door and window seal

Wipe the window and seal after each wash to remove lint and stains. If lint builds up, it can cause leaks.

Remove coins, buttons and other objects trapped in the seal after every wash.


The window and door seal should be cleaned monthly to ensure your appliance functions normally.



## Cleaning the water supply hose filter

- If there is hardly any water in the appliance and the tap is open, then the water supply hose filter needs to be cleaned.

1. Close the tap
2. Remove the water inlet hose from the tap.
3. Clean the filter.
4. Reconnect the water inlet hose.

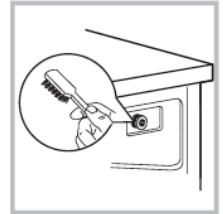


## Cleaning the washer dryer filter



5. Unscrew the water inlet hose from the back of the machine.
6. Remove the filter using a pair of pliers.
7. Use a brush to clean the filter.
8. Replace the filter once cleaning is finished.
9. Reconnect the water inlet hose.

## Cleaning the detergent compartment

If you observe any dirtying of the detergent drawer, clean it.

To do this:

1. Press the cover of the softener compartment inside the detergent drawer, shown by the arrow (  ).
2. Unclip the cover, remove it, and clean all the grooves with water.
3. Replace the cover and close the drawer.

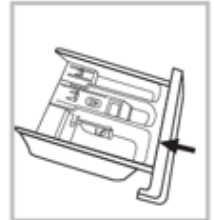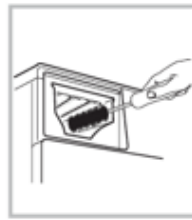

1. Open the detergent drawer by pressing on   
 A
2. Clean the detergent drawer under running water

3. Clean the inside of the compartment where the detergent draw fits, using an old toothbrush, for example.

4. Refit the detergent drawer


### Note

- Do not use alcohol, solvents or chemicals to clean the washer dryer.
- Cleaning the detergent drawer every 3 months is recommended.

## Cleaning the drain pump filter

### Warning

- Beware of hot water!
- Disconnect the appliance to avoid any electric shock hazard.
- The drain pump filter filters out lint and other small debris present in the laundry.
- Clean the filter regularly to ensure proper washing machine operation.

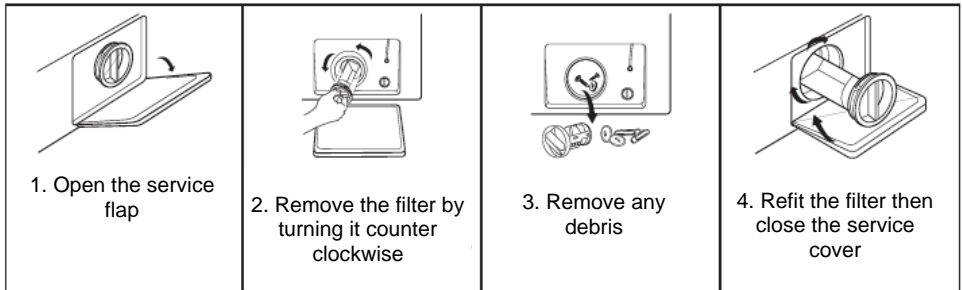

### Warning!

- Ensure that the filter is properly refitted to avoid any leakage.
- When the washing machine is running, never remove the filter.
- This operation must only be performed with the washing machine switched off.

## Preventing scale build-up

If you live in an area with hard water, we recommend using a washing machine descaling product. Regularly check for any scale build-up in the drum. If necessary, run an empty drum washing cycle with a descaling product. Refer to the instructions provided by on the product packaging.

## Troubleshooting

The washer dryer cannot start up or stops during operation.  
First try to solve the problem. If you cannot, then contact the service centre.

| Description                                       | Cause   | Solution   |
|---|---|--|
| The washer dryer does not start                   | The door is not properly closed   | Switch the washing machine back on after closing the door<br>Check whether any clothes are trapped                               |
| The door cannot be opened                         | The washer dryer's safety protection system is activated  | Disconnect the power, reconnect it, and switch the machine back on   |
| Water leakage                                     | The connection between the washing machine and the water supply hose or the drain hose is not tight | Check the water pipes and tighten the connections<br>Clean the drain hose  |
| Detergent residues in the detergent compartment   | The detergent is dampened and agglomerated  | Clean and dry the compartment  |
| Washing machine lights or display do not light up | The appliance is not powered. Circuitry problem. Connection problem.                                | Check that the power is on and that the power cord is properly connected.  |
| Unusual noise                                     |   | Make sure that the transit bolts have been removed<br>Make sure that the washing machine is installed on a solid and level floor |
| E30   | The door is not properly closed   | Close the door properly and restart the washer dryer<br>Check whether any clothes are trapped                                    |
| E10   | Problem adding water during washing   | Check whether the water pressure is too low<br>Straighten the water supply hose<br>Check the water supply filter is              |

| Description | Cause                         | Solution  |
|-------------|-------------------------------|---|
|             |                               | not blocked   |
| E21         | Water drainage takes too long | Check if the drain hose is blocked  |
| E12         | Water leakage                 | Run another programme. If error code E12 is still displayed, turn off the water supply, disconnect the washing machine and call your after sales service. |
| EXX         | Other                         | Do not hesitate to reset the washing machine Contact our after sales service if the issues remain   |

### Note

- Once this check is complete, start the appliance. If the problem occurs again or if the error codes are displayed again, contact your after-sales service.
- Any attempt made by the user or a non professional to repair the appliance may affect user safety and void the appliance warranty.



## Performing your own repairs


Some repairs may be carried out by the user in certain cases. The [sav.groupebrandt.com](http://sav.groupebrandt.com) website offers you the option of ordering certain spare parts as well as bringing you access to technical data and safety instructions to guide you through troubleshooting. In line with the stipulations of Article L441-5 of the French Consumer Code (Code de la Consommation), the manufacturer cannot be held liable for any damage that occurs while performing your own repairs inasmuch as this damage is linked to improper procedures by the user or any failure by the latter to follow the instructions for repairing the product.

## Availability of spare parts

The European Regulation (EU) 2019-2023 states that spare parts must be available, especially for the appliance user, for a minimum period of 14 years under the terms set out in the above regulation.

## Technical specifications

|                         |                |
|-------------------------|----------------|
| Power supply            | 220-240V/50HZ  |
| Maximum current         | 10 A           |
| Standard water pressure | 0.05 MPa-1 MPa |

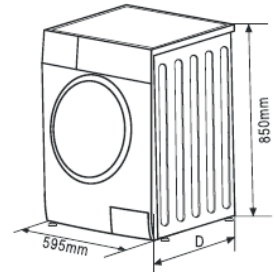

| Model    | Washing and drying capacity | Dimensions (W*D*H in mm) | Net weight | Rated power |
|----------|-----------------------------|--------------------------|------------|-------------|
| WDB184QW | 8 / 6 kg                    | 595*595*850              | 72 kg      | 1900W       |

## General information on regulation EU 2019-2023

---

- When using the test programmes, wash the specified load using the maximum spin speed.
- The actual parameters will depend on how the appliance is used and may differ from the preset parameters.
- This domestic washing machine is equipped with a system for managing energy consumption. The time spent in the mode left to run is less than one minute.
- The most effective programs from a power and water consumption point of view are generally those that run at low temperature for a longer duration.
- Loading the domestic washer dryer to the maximum capacity stated by the manufacturer for each programme contributes to saving power and water.
- The noise and remaining moisture content are influenced by the spin speed: the higher the spin speed during the spin phase, the higher the noise level and the lower the remaining moisture content of the laundry.
- To access the data on your model, stored in the product database in line with regulation (EU) 2019/2014 and data relating to energy labelling, please connect to the dedicated website at <https://eprel.ec.europa.eu/>  
Find the reference of your appliance on the website by entering the service reference shown on the ID plate on your appliance. Another way to access this information is to flash the QR code found on the energy label on your product.

| Cycle        | Capacity in kg | Temperature | Cycle length in h:min | Power consumption in KWh / cycle | Water consumption in L / cycle | Highest temperature | Remaining moisture content in% / Spin speed in rpm |
|--------------|----------------|-------------|-----------------------|----------------------------------|--------------------------------|---------------------|--|
| 20°C         | 5.0            | 20          | 1:11                  | 0.212                            | 51                             | 20                  | 65%/1000   |
| Cotton       | 10.0           | 60          | 3:44                  | 1.708                            | 85                             | 60                  | 53%/1500   |
| Intensive    | 10.0           | 40          | 3:48                  | 1.130                            | 85                             | 40                  | 70% / 800  |
| Mix          | 10.0           | 40          | 1:30                  | 0.889                            | 85                             | 40                  | 65%/1000   |
| Flash 15'    | 2.0            | Cold        | 0:15                  | 0.030                            | 31                             | Cold                | 75% / 800  |
| ECO 40-60    | 10.0           | -           | 3:59                  | 1.015                            | 70.6                           | 38                  | 53% / 1450   |
|              | 5.0            | -           | 3:00                  | 0.635                            | 55.3                           | 33                  | 53%/1450   |
|              | 2.5            | -           | 3:00                  | 0.286                            | 38.8                           | 22                  | 53%/1450   |
| Wash and dry | 7.0            | -           | 9:40                  | 4.255                            | 115                            | 30                  | 3%/1500  |
|              | 3.5            | -           | 7:00                  | 2.193                            | 77                             | 21                  | 3%/1500  |

The EU energy efficiency classification is: B

Energy efficiency test programme: ECO 40-60

Speed: the highest; other settings are set to their default values.

Half-load for a washing machine with a capacity of 8.0kg: 4.0kg

The ECO 40-60 program is suitable for washing moderately dirty cotton textiles labelled washable at 40°C or 60°C, in the same cycle. This is the programme used to assess compliance with the European Union's eco-design regulations.

The "wash and dry" cycle is suitable for washing moderately dirty cotton textiles labelled washable at 40°C or 60°C, in the same cycle, and for drying this laundry so that it can be immediately put away. This program is used to test compliance with the EU ecodesign legislation.

**Note**

- The values provided for programmes other than the ECO 40-60 program are provided as an indication only.

## AFTER-SALES SERVICE

Any repairs to your appliance must be made by a qualified professional accredited to work on the brand. When calling, please provide the full references of your appliance (commercial reference, service reference, serial number), so that we can handle your call more efficiently. This information can be found on the data plate.



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the European Union.



For more information, please contact the local authority or your retailer where you purchased the product.